DIRECTV® Receiver Setup for SK-3005



The following instructions assume that the TRAV'LER® antenna has found and locked onto satellites 101°, 110° and 119°. There should be an asterisk next to 101°, 110°, and 119° on the TRAV'LER interface.

In most DIRECTV receivers, the setup is done through the "Repeat Satellite Setup" option in your receiver menu. The following instructions are based upon an H24 receiver. If your receiver differs from the options shown, you may need to consult your receiver manual. The wording and display used in your receiver may differ slightly.

For Help, Call 1-800-788-4417



Press Menu on your remote, and then select Parental, Fav's & Setup.



Select System Setup.



In your receiver Menu, you will need to identify the Satellite Menu. The Satellite Menu will have an option for Satellite Setup.



You may be required to press the **DASH (-)** before proceeding (underneath #7 on the remote).



Set Dish Type for **04: Slimline-5**. Set the Switch Type for **02: Multiswitch**.

Press Continue.



Your installation will be verified.



Errors may be displayed on the Installation Status screen. This is normal to see one or two boxes with an X instead of a .

Select Continue.



Select Continue.



The program guide will download.

When the status bar reaches 100%, press **Continue**.



The receiver will run Data Feed and Guide Feed Tests for a few moments.



You will be prompted to set up the remote. Select **Setup Remote Later** to do this at a later time.



Select Watch DIRECTV.

Receiver Setup is now complete.