


**Before you begin, check that the:** -Door is closed -On/Off button (5) is in the OFF (OUT) position -Program Selector knob (1) is in a "Reset" position

## Setting the Controls is Easy!

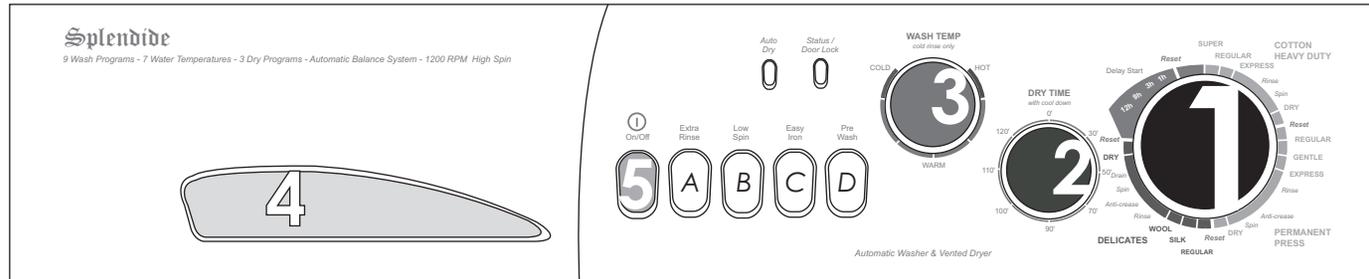

**1 Select A Wash Program**  
Turn the program selector knob (1) clockwise until the program you want aligns with the mark on the knob.

**IMPORTANT:** Should you wish to interrupt a program in progress, advance the Program Selector knob (1) to a "Reset" position and wait 5 seconds.

**2 Choose a Dry Time**  
If you want your machine to go from wash to dry automatically, use the Dry Time knob (2) to select a timed drying session ranging from 30-120 min. (Cool-Down not included).

**IMPORTANT:** Once set, this knob will not move during the dry cycle.

**3 Select A Wash Temp.**  
Turn the Wash Temp. knob (3) to the temperature you want. The 7 selections range from HOT to COLD. *Note: Rinse temperatures are always COLD.*

**Special Programs**  
Use buttons A, B, C, or D to run a Special program. If you don't wish to use these buttons, leave them in their OFF (OUT) position.

**4 Add Laundry Aids**  
Pull the dispenser drawer (4) open and add your favorite laundry aids to the appropriately labeled compartments. When finished, close the drawer.

**IMPORTANT:** Use no more than 1-2 tbsp. of powder detergent (or 1/2-1 tbsp. liquid) and 1-2 tbsp. of fabric softener per wash load.

**5 Press ON**  
Press the ON button (5) in. The Auto Dry LED will light if a dry time has been set. The Status/Door Lock LED will flash then light steady, indicating that the door is locked and the program will begin.

**IMPORTANT:** For your protection, the door will stay locked for the duration of the wash and dry cycles.

**ATTENTION!** Before operating your washer-dryer, read your owners manual. It contains important safety, operation, and maintenance information.

Wash Cycles	Time* (Minutes)	Special Options (Buttons)	Water Temp. Selections	High Spin	Dry Cycles (0 min. - 120 min.)	
<b>Cotton Heavy Duty</b>						
Super	80	Pre-wash Low Spin Extra Rinse	7 Ranging from HOT to COLD  <i>Note: Rinse water temperatures are always COLD</i>	1200 RPM	Cotton Heavy Duty Dry	
Regular	70					
Express	40					
<b>Permanent Press</b>						
Regular	75	Pre-Wash Easy Iron Low Spin Extra Rinse		850 RPM	Permanent Press Dry	
Gentle	65					
Express	40					
<b>Delicates</b>						
Regular	65	Pre-wash	600 RPM	Delicates Dry		
Silk	60	Pre-wash, Easy Iron				
Wool/Hand Wash	45	No Options			No Dry	

\*Cycle times vary according to water pressure, load size and fabric type.

### Is doing laundry different in a Splendide?

Yes. Your Splendide will save you space, water, electricity, and detergent while treating your fabrics gentler and washing them better. Instead of washing several, bulky loads of laundry one day a week, you'll learn to wash smaller, more convenient loads every day or two. Simply program your washer-dryer to wash and dry automatically - and let the machine do the rest!

### Where's the load size selector?

Your Splendide has a built-in Automatic Consumption Control feature that automatically adjusts

the water used for the size and fabric type of your load. No guesswork, perfect every time.

### Any tips for loading the drum?

Remember, in separate w/d's, dryer drums are 2x larger than washer drums. In your Splendide, you wash and dry in the same drum. If you wash full loads, you'll need to remove some items (up to 50%) before starting a dry program. When you program your machine to wash then dry automatically, load the drum according to the recommended load sizes for drying and your desired dry time. (For more

information about loading your washer-dryer's drum, see "Choosing a Load," pg. 12, in your owners manual.)

### Why can't I see the water through the door?

Your Splendide uses the latest in washing technology and needs less than half the water to get wash results that are twice as good! In fact, Splendide washer-dryers are rated top of their class\* in terms of wash performance and energy efficiency.

\*Class A Norm EN 60456 Washing Machine Label Directive 95/72/EC & Energy Star labeled for energy/resource efficiency.

### How can I optimize my dry times?

Never overload the drum. Also, using 1-2 tbsp. of a liquid fabric softener (or a detergent w/ built-in softener) during the wash cycle will not only shorten dry times, but reduce fabric wrinkling. (If you own one of Splendide's Comb-o-matic models, see "A Special Note About Condenser Drying," -pg.15 in your owners manual for more info.)

### When can I open the door?

At the end of a cycle (or if you "Reset" a dry cycle), the Status/Door Lock LED flashes quickly indicating that the program is finished (or canceled) but the door is still locked. When it flashes slowly, the door can safely be opened. Note: Door may remain locked for up to 1-2 minutes.

**Splendide Div. Westland Sales**  
**Corporate Headquarters** 15650 SE 102nd Ave. Clackamas, OR 97015 - USA  
**Phone:** 503.655.2563 **Fax:** 503.656.8829  
**e-Mail:** splendide@westlandsales.com  
**Web:** www.splendide.com

**Splendide®**  
 "Where Technology Meets Ecology"